


Customizable Narrow Backset Mortise Lock Installation

1) Prepare For Installation

Assemble the inside and outside trim, lock, and profile cylinder together on the benchtop to gain an understanding of how the set works. Check handing, door swing, and function. Note: The levers are at the top, while the profile cylinder is at the bottom. The faceplate of the lock is always stainless steel.

2) Door Preparation

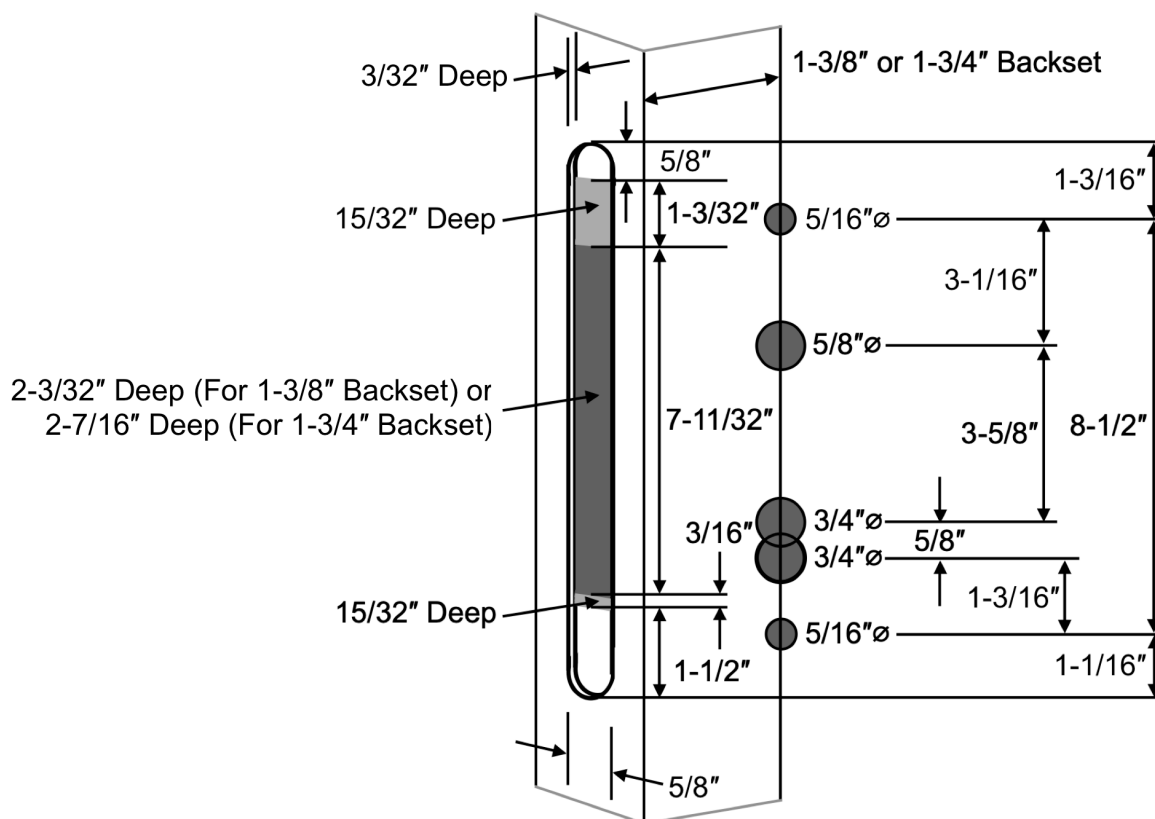

3) Prepare Door Jamb For Strike Plate

4) Install Strike Plate

5) Install Mortise Lock

Note: To switch door swing of lock, firmly grasp nosebolt, pull outward, and turn 180°.

6) Install Outside and Inside Trims

7) Install Profile Cylinder